



FLEXpower™ TWO FXR
Fully Pre-Wired Dual Inverter System

Inverter/Charger x2



System Display and Controller (MATE3)

HUB Communications Manager

Battery Status and Inverter Status LED Indicators

FLEXnet DC Battery Monitor

Charge Controller (FLEXmax 80 x2)

