


EZ Tower™

OWNER'S MANUAL FOR AIR WIND™ TURBINES

Assembly

Installation

Maintenance

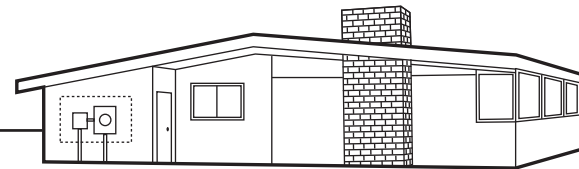

Primus Wind Power, Inc.
938 Quail Street
Lakewood, CO USA
Phone: 303-242-5820

www.primuswindpower.com

MADE IN THE **USA** © 2013 Primus Wind Power, Inc.
All Rights Reserved

Primus Wind Power

Congratulations on your purchase and welcome to our family!

Dear EZ Tower™ Owner,

On behalf of all of us at Primus Wind Power, thank you for choosing our company as the source for your renewable energy system. Primus Wind Power is confident that you will be pleased with the performance and quality of our products.

Nearly three billion people in the world do not have electricity. By necessity, most will ultimately get their electricity from renewable resources to the benefit of all. You are a pioneer and part of the solution!

Renewable energy power systems provide independent electric power for boats, homeowners, farms, villages and commercial applications. If utility power is available, your renewable energy system can reduce your electric bill and provide electrical backup during storms or line failure.

Renewable means energy sources that:

- Do not deplete the world's finite fossil fuel resources
- Do not pollute or warm the atmosphere
- Do not generate hazardous waste

If you have any questions or comments, we would like to hear from you. Please call during working hours (Monday-Friday 8:00 am to 5:00 pm MST). Our phone number is 303-242-5820.

We hope you will enjoy the benefits of your wind powered electrical system for many years to come. Again, welcome to our family and thank you for investing in the future of wind energy.

Primus Wind Power

EZ Tower Owner's Manual
Document: 3-CMLT-1027-01
Revision: A

IMPORTANT SAFETY INSTRUCTIONS

READ THESE INSTRUCTIONS IN THEIR ENTIRETY BEFORE INSTALLING YOUR TOWER.

- 1) **SAVE THESE INSTRUCTIONS.** This manual contains important instructions for EZ Tower™ that must be followed during installation and maintenance.
- 2) Read, understand and respect all warnings.
- 3) Obtain all required permits and engineering certifications for your tower and tower location.
- 4) Soil and wind conditions vary. Towers and tower foundations must be designed for your specific location.
- 5) Locate tower so as not to fall on occupied buildings, neighbors' property or power lines.
- 6) **STOP! DO NOT** climb the tower. Tower climbing is very dangerous.
- 7) Locate the tower mounting mast well away from occupied buildings and power lines. A minimum of 300 ft (100 m) is recommended.
- 8) If the wind turbine sounds or appears loose, or if the tower is making an unusual sound, correct the condition immediately. A loose wind turbine or component will incur further damage and/or may fall from the tower.
- 9) Never stand in line with operating blades.
- 10) High voltage systems represent a dangerous shock hazard. All high voltage systems should be wired and maintained by a qualified and licensed electrician.
- 11) Use protective gloves when handling guy wires.
- 12) Use protective gloves and safety glasses when working around batteries.

In this manual



IMPORTANT:
Please take note



TIP: Helpful information
to ease the installation



CAUTION: Risk of injury or
death - proceed with extreme
caution

SAFE INSTALLATION

It is very important to remember that any wind turbine has high speed spinning parts and can be very dangerous! Be sure that all bolted connections are tight and guy wire anchors are suitable for your soil conditions. These elements will be explained in further detailed later in this manual. When installing your EZ Tower™:

- 1) Two people must be present when the tower is raised.
Have at least two people available during assembly and erection of tower.
- 2) Always wear closed-toe shoes.
- 3) Always wear safety glasses.
- 4) Always wear protective gloves when handling cable.



CAUTION: Choose a very calm day to do your installation. A gust of wind at the wrong moment could cause a very serious injury.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS _____	4
SAFE INSTALLATION _____	5
INTRODUCTION TO THE EZ TOWER _____	7
PARTS & REQUIRED TOOLS _____	8-9
SITE SELECTION _____	10
Windspeed _____	11
Surface Roughness _____	11
Topography _____	11
Barriers _____	11
TOWER BASE & EARTH ANCHOR LAYOUT _____	12
Tower Layout _____	12
Tower Base _____	12
Tower Assembly-Hillside _____	12
Arrowhead Earth Anchors _____	13-14
Soil Type & Recommended Anchors _____	15
TOWER ASSEMBLY _____	16-17
Tower Tube Layout _____	16
Attaching the Guy Wires _____	18
Raising the Tower _____	19
Adjusting Guy Wires _____	19
INSTALLING AIR Wind turbine _____	20
EZ TOWER MAINTENANCE _____	21

INTRODUCTION TO THE EZ TOWER™

Congratulations! You have just received the simplest, and most economical EZ Tower™ available for your AIR™ turbine. This kit is designed to be easy to assemble and erect.

The EZ Tower™ is designed specifically for Primus Wind Power, Inc. AIR family of small wind turbines. This guy-wire supported tower uses lightweight tubing while providing plenty of strength. Two people can easily erect this tower in about an hour. Because the wind turbine and EZ Tower™ are lightweight, no winches or vehicles are needed to erect the tower. The EZ Tower™ includes a simple yet effective tower base and anchoring system.

The EZ Tower™ includes a simple yet effective tower base and anchoring system, which eliminates the need for a concrete pad. Depending on your soil conditions, cement may be necessary for proper anchoring. It is important to read this manual first and understand your soil conditions before you begin construction. Read this manual thoroughly before beginning assembly.

Read this manual thoroughly before beginning assembly. Primus Wind Power, Inc. assumes no responsibility for inaccuracies or omissions. The user of this information and product assumes full responsibility and risk. All specifications are subject to change without notice.

If you have any questions on siting, proper installation or operation, please contact Primus Wind Power, Inc. or your dealer before installation.

EZ TOWER PARTS & REQUIRED TOOLS

EZ Tower Parts:

Description	Quantity
Tower Base	1
21 ft (6.4 m) Guy Wire Set (wire guy wire attachment plate)	1
30 ft (9.1 m) Guy Wire Set (wire guy wire attachment plate)	1
M10 x 65 mm Bolt	1
M10 Locknut	1
Cable Thimbles	8
Cable Clamps	16
Tower Base Earth Spikes	4
Arrowhead Earth Anchors	4
Earth Anchor Driving Rod	1
1- 7/8 in x 72 in (4.76 cm x 1.8 m) Tower Tubes	4
1- 7/8 in x 48 in (4.76 cm x 1.2 m) Tower Tubes	1
1- 7/8 in x 42 in (4.76 cm x 1.0 m) Tower Tubes	1



IMPORTANT: If any parts are missing from the list shown above, call Primus Wind Power.

EZ Tower Required Tools:

Description	Quantity
100 ft (30.5 m) Measuring Tape	1
5/16 in (.8 cm) Wrench, Socket or Nut Driver (preferred)	1 or 2
9/16 in (1.4 cm) Wrench or Socket	2
10 kg Hammer	1
Mallet	1
Pliers	1
Carpenters Level	1
Safety Glasses	1 pair/person
Protective Gloves	1 pair/person




IMPORTANT: Before you begin installation of your EZ Tower be sure to have all parts and required tools.


EZ Tower Parts (Images Not Shown to Scale)




Tower Base

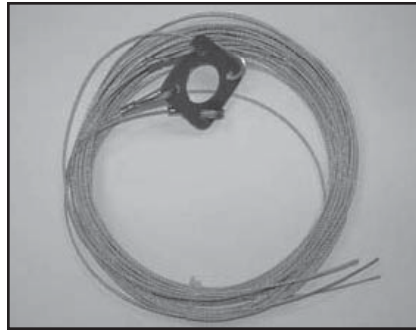


Lower Guy Cable Wire: 21 ft (6.4 m)

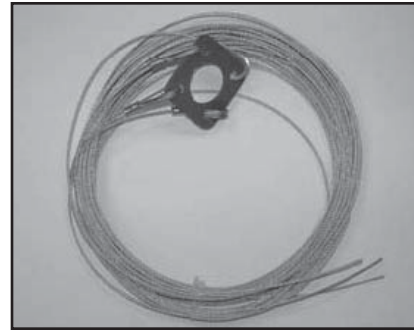

Upper Guy Cable Wire: 30 ft (9.1 m)

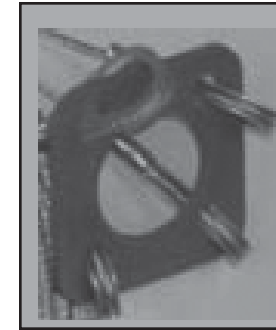


Guy Wire Attachment Plates

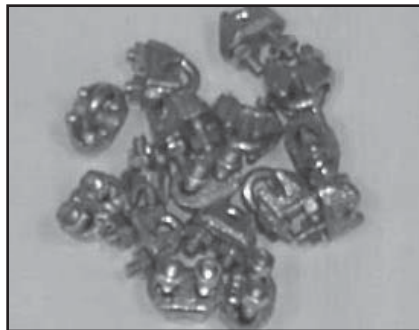

Cable Clamps (16)



Cable Thimbles (8)

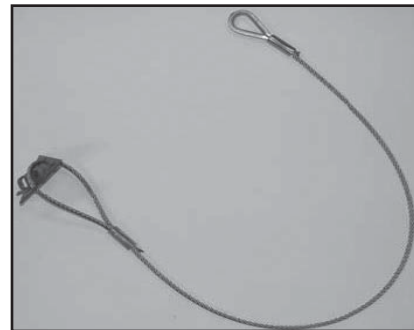


Arrowhead Earth Anchor



Tower Base Earth Spikes



Earth Anchor Driving Rod

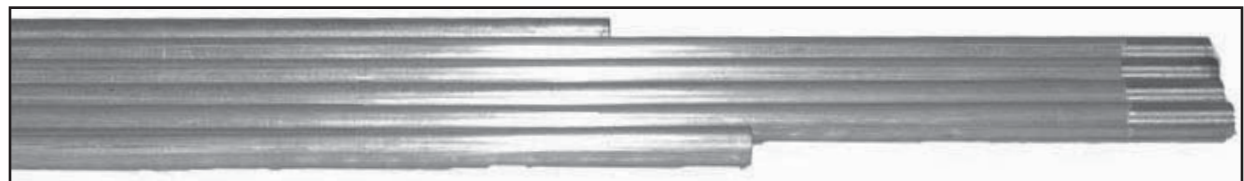

Tower Tubes: (1) 42 in (1.0 m); (1) 48 in (1.2 m); (4) 72 in (1.8 m)

SITE SELECTION

The information in this section gives specifics about the ideal siting of the EZ Tower™. If your area does not have an ideal location, find the best location possible.

! IMPORTANT: The most important factor in maximizing the performance of your wind turbine is proper siting. Remember! The better the siting, the greater the performance of the AIR™ wind turbine - EZ Tower™.

Small increases in average wind speeds result in dramatic increases in energy output of the wind turbine. For example, an increase in wind speed of 10% (9 mph - 10 mph; 4 m/s - 4.5 m/s) results in approximately a 30% increase in the power available from the wind. Therefore, the better the location the better the performance. As a rule, the wind turbine should be mounted as high and as far away from obstructions as possible.

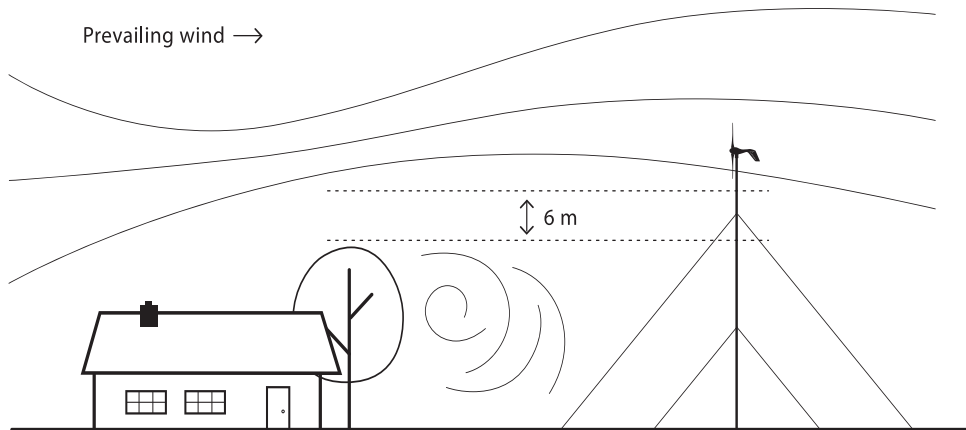


Fig. 2 Optimal EZ Tower location.

Two basic requirements for a good wind turbine site:

- Good average wind speed
- Low wind turbulence

The lower the turbulence, the less stress your wind turbine will sustain, the longer it will last and the more energy it will produce.

💡 TIP: Your dealer can help you determine the best location for AIR on your property.


Keep the following in mind when siting:

- A tower immediately downwind of a building should be at least 20 ft (6.0 m) above the height of the building.
- The tower should be 20 ft (6.0 m) higher than any barrier within a 500 ft (152.4 m) radius.

Wind Speed



IMPORTANT: Another important element to maximize performance of your wind turbine is average wind speed.

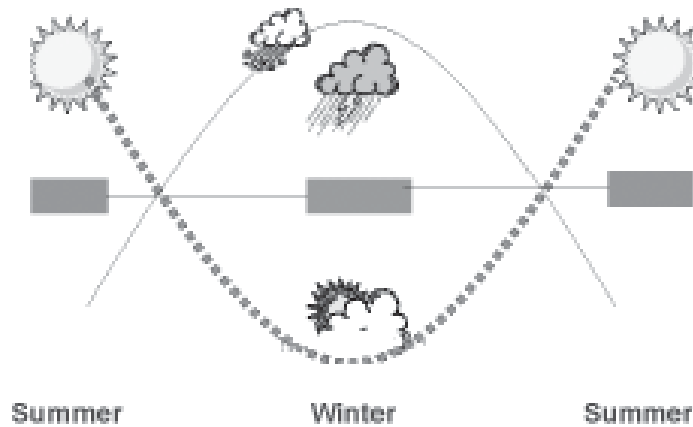

Your wind turbine will produce energy when there is wind. Your solar panel will produce energy when the solar is plentiful. This is typical of seasonal changes. When it is sunny it is calm; when it is cloudy it is windy.

For your wind turbine to produce energy, average wind speed at your site should be at least 8 mph:

8 miles/hour = 3.6 meters/second

If winds in your area are less than 8 mph, it is recommended that you install a Photovoltaic (PV) system next to your wind turbine creating a hybrid renewable energy system.

Surface Roughness

Rough ground is land covered with small bushes, trees or other obstructions. Smooth land is an area covered only by grass or earth.

- The smoother the ground, the less the friction.
- The rougher the ground the greater the friction, thereby requiring the tower to be higher.



IMPORTANT: It is important to locate your wind turbine in an area with as smooth a surface as possible.

Topography



TIP: Place your tower on the highest land practical.

If your location is basically flat, topography is not in issue when deciding where to place your wind turbine.

There are circumstances where the highest land available may not be the best place for your wind turbine. Highest land nearby may be awkward to get to, may be too far away from where you need the power, or may expose your wind turbine to potentially damaging turbulent conditions.

Barriers

Barriers (buildings, trees, etc. that impede flow of wind) produce wakes that may extend far downwind of the barrier and to a height considerably above the barrier. These wakes are areas of decreased wind speed and can cause potentially damaging turbulence. Barriers near the wind turbine will affect its performance.

TOWER BASE & EARTH ANCHOR LAYOUT



IMPORTANT: When laying out the tower, be sure you have a very calm day, with no wind.

Tower Layout

The tower is assembled on the ground, then tilted into position. The tower base supports the tower on the ground, and serves as the pivot point to raise and lower the tower.

Two sets of guy wires (an upper and lower set with four wires per set) secure the tower vertically:

- The upper set of guy wires secure the tower at a height of approximately 26 ft (8.0 m).
- The lower set of guy wires secure the tower at a height of approximately 15 ft (4.6 m).

Four arrowhead earth anchors (located approximately 15 ft (4.6 m) from the tower base at 90° intervals) secure the guy wires to the ground. One upper guy wire and one lower guy wire attach to each earth anchor.

Tower Assembly - Hillside

If possible, position the tower to tilt along the incline of the hill, with the top of the tower uphill from the tower base.

Tower Base



IMPORTANT: Two people must assemble and erect the tower.



1. Locate the area where you will install the tower. Place the tower base on the ground and orient in the direction the tower will be tilted.

2. Have one person stand at the tower base holding a measuring tape.

3. The second person takes the measuring tape end and walks out 15 ft (4.6 m) and in a circle around the tower base.

- Make sure there are no obstructions along the circumference.
- Make sure there is sufficient room to tilt the tower into position and install the wind turbine.



4. Drive the four tower base earth spikes into the ground toward the center of the base, as shown here.

Arrowhead Earth Anchors



1. Position the first earth anchor on the ground along the tower tilt axis, 15 ft (4.6 m) from the tower base.
2. Place the second earth anchor along the tower tilt axis, 15 ft (4.6 m) from the tower base in the opposite direction.
 - With the tower base in the center, the first and second earth anchors should form a straight line 30 ft (9.2 m) along the tower tilt axis.

3. Place the third earth anchor 15 ft (4.6) from the tower base.

4. Place the fourth earth anchor 15 ft (4.6 m) from the tower base.


- With the tower base in the center, the third and fourth earth anchors should form a line perpendicular to the line formed by the first two earth anchors.

5. Check the position of the earth anchors to ensure that they are within approximately 6 in (15 cm) of their ideal position.

- Each earth anchor should be 15 ft (4.6 m) from the tower base.



6. Insert the beveled end of the earth anchor driving rod into the arrowhead earth anchor, as shown here.

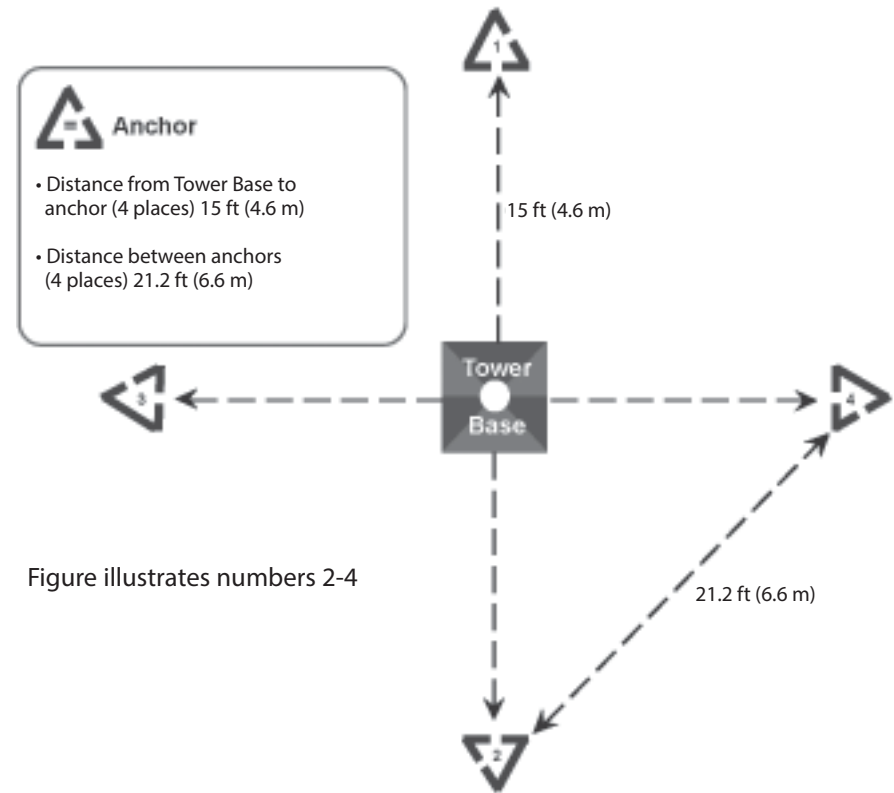



7. Drive the earth anchor into the ground using the earth anchor driving rod and a 10 lb hammer.

- Notice the angle at which the earth anchor is being driven. This angle is important for maximum pull strength. The angle should be in line with the angle of the guy wire (i.e. the angle should be pointing towards the tower base).



IMPORTANT: Earth anchors must be installed in soil that has been undisturbed.

8. Drive the earth anchor into the ground until 6 in (15 cm) of cable remains above ground.



9. Then, insert the earth anchor driving rod through the cable eye and pull up with force. You will notice the earth anchor pulling out of the ground slightly. This will lock the earth anchor in the ground.

Note: No more than 12 in (30 cm) of earth anchor cable should be out of the ground once it has been locked into place.



10. Finish installing the remaining three earth anchors as described above.



IMPORTANT: Although the earth anchor is designed to break through rocks, if there is a rock or obstruction that is too large, remove and relocate the anchor. The depth of the anchor is critical to its effectiveness.

Soil Type and Recommended Anchors

What anchor to be used depends on the soil type. Refer to the Soil Type and Anchor Recommendations table below for suggestions.

Soil Type	Recommended Anchor	Alternative Anchor
Loose Sand	Cast Concrete (Buried)	None
Loose Gravel	Arrowhead	Cast Concrete (Buried)
Loam	Arrowhead	Cast Concrete (Buried)
Clay	Arrowhead	Cast Concrete (Buried)
Rocky Soil	Arrowhead	Cast Concrete (Buried)
Gravelly Soil	Arrowhead	Cast Concrete (Buried)
Solid Rock (Soft)	Large/Long Expansion Bolt	Large Eye Bolt and Cement
Solid Rock (Hard)	Smaller Expansion Bolt	None





IMPORTANT: If the arrowhead earth anchors included with the EZ Tower™ do not work with your soil conditions, contact Primus Wind Power, Inc. for assistance with an alternative anchor.

TOWER ASSEMBLY

The tower is assembled in several easy steps. If this is a permanent installation, first dig a trench from the base of the tower, to where the battery is housed.

Tower Tube Layout

1. Lay out the six tower tubes on the ground as shown on the following page. Leave approximately 6 in (15 cm) between each tube.

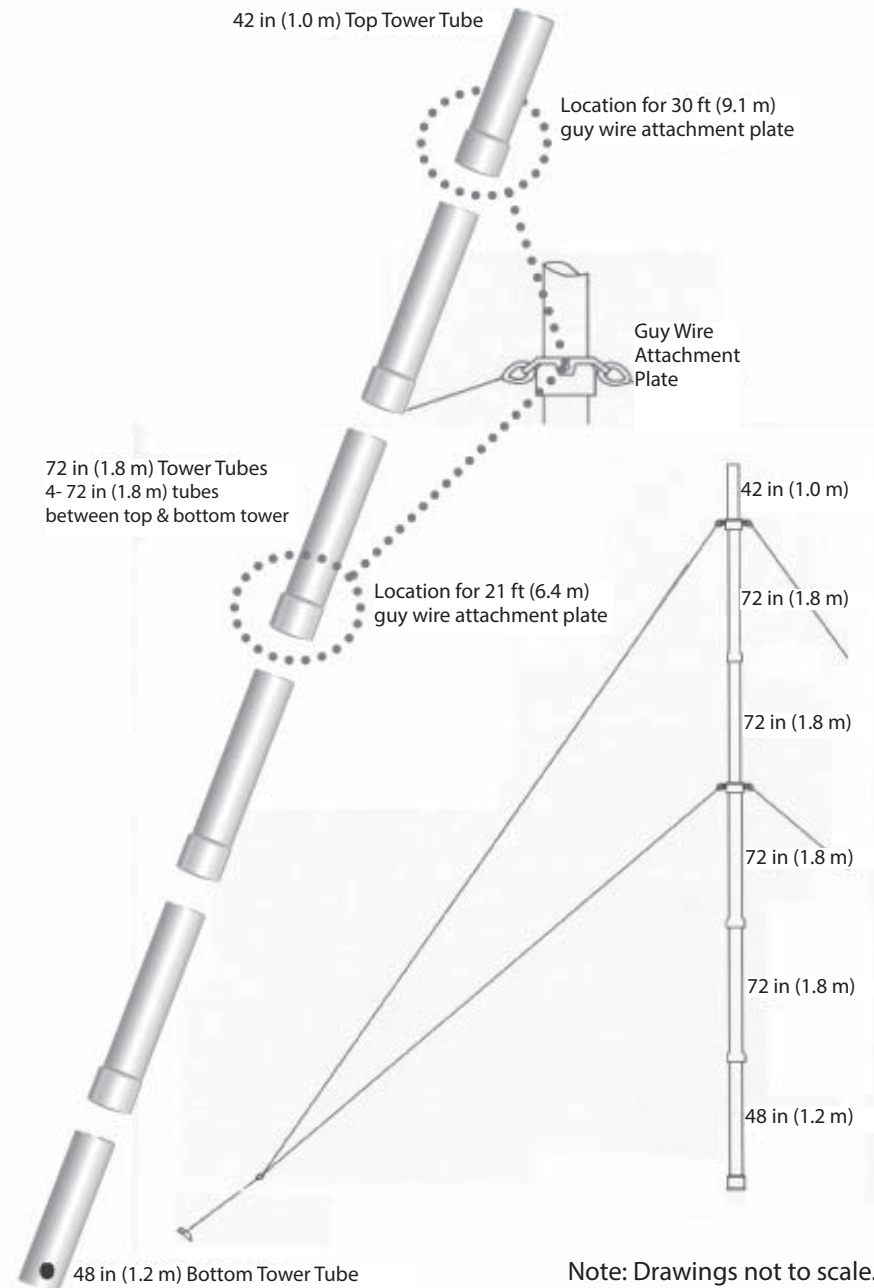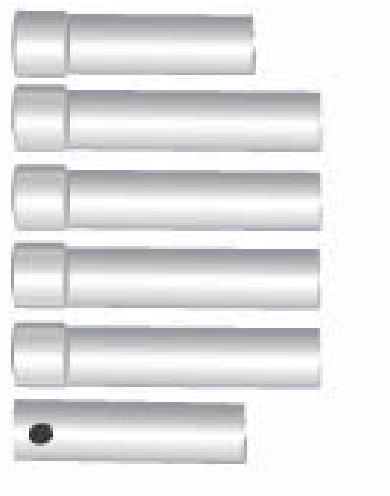

2. With the tubes laid out as shown on the preceding page, slide the guy wire attachment plates over the corresponding tower tubes.

- Slide the 30 ft (9.1 m) guy wire attachment plate over the top tower tube.
- Slide the 21 ft (6.4 m) guy wire attachment plate over the fourth tower tube from the bottom.



3. Align the guy wire attachment plate so that each guy wire is in line with the anchors.

4. With all guide wire attachment plates in position, electrical wire can be run through the tower tubes. Leave sufficient wire protruding at the top of the tower to connect the wind turbine.

- Electrical wire can also be pulled through with a wire snake, after the tower tubes are assembled.
- Refer to AIR Wind turbine Operator's Manual (AAS32 - Document #0056) for proper wire gauge selection.

5. Join the tower tubes together using a soft-faced mallet or hammer. Use a piece of wood between the tube and the mallet to protect the end of the tube.

- The expanded end of the tube prevents the guy wire attachment plate from sliding down the tube, and positions the guy wire attachment plate at the correct height.



6. Secure the lower tube to the tower base with the M10 bolt and nyloc nut. Tighten the nut until it just contacts the tower base.




Attaching the Guy Wires

1. Orient guy wire attachment plates with their corners pointing towards the anchor. If they are not pointing towards the anchor, adjust them before continuing.

2. Uncoil each guy wire bundle and extend them to their respective anchoring point. The fourth anchor point is directly under the tower.



 **CAUTION:** Be careful not to let the guy wires become twisted when the tower is erected.

3. Begin attaching the guy wires to the earth anchors at the sides of the tower.



- Insert two cable thimbles in each earth anchor eyelet.
- Thread an upper guy wire and lower guy wire around its own cable thimble.
- Loosely attach two cable clamps to each guy wire.



IMPORTANT: You may need to use pliers to spread open the cable thimbles to install them on the anchors. Use the pliers to press the open end of the cable thimbles back together before attaching the guy wires.

4. Leave about 6 in (15 cm) of slack in the guy wires, and tighten the cable clamps.

Note: The guy wire to the tower should contact the 'saddle' side of the cable clamp. On level ground, there will be approximately 5 ft (1.5 m) of extra cable.

5. Attach two cable thimbles to the third earth anchor located directly below the tower.

6. Measure the length of the upper and lower guy wires on the side earth anchors. Use the same length for the guy wires on the third earth anchor.

7. Secure the cable clamps to the third guy wire.

8. Place two cable thimbles on the fourth earth anchor. **DO NOT** connect the guy wires at this time.

9. The fourth set of guy wires are used to help tilt the tower into position. Secure these guy wires after the tower is upright.

Raising the Tower

Primus Wind Power, Inc. highly recommends first tilting the tower into position without the wind turbine attached, to verify proper installation and operation of the tower.

! IMPORTANT: Ensure that all side and rear guy wires are attached and that all cable clamps are tight before raising the tower.

1. Before raising the tower, have another person ready to assist with installation.

Note: Be sure to wear gloves when handling the guy wires!

2. One person should push the tower up into position. The other person should pull by the unattached upper guy wire. With the tower off the ground a few feet, make sure that all the wires are coming up cleanly.



Adjusting the Guy Wires

If the guy wires are too tight they may cause the tower to bow as it is raised. If this happens, lower the tower to the ground and reduce the tension on the guy wires.

- Check to see which wire(s) are too tight (the wires act in pairs).
- Release the tension on one of the wires by loosening the 2 cable clamps until the cable can be slid through them
- Let out some cable until there is no tension in the wire.

⚡ CAUTION: It is easy to over tighten the guy wires. Wires should only have the slack taken out with no real tension.

3. Retighten the cable clamps before raising the tower.

4. Once the tower is raised to vertical, attach the last guy wires to their anchor.

5. Walk a short distance from the tower and look to see that it is straight.



6. Focus on the angle of the tower. Adjust the cables until the tower is straight up and down. Use a carpenter's level held against the tower for this.

7. To adjust the angle of the tower, relax one guy wire and tighten the guy wire opposite to it. Repeat this process until the tower is straight.

8. When the tower is straight, make sure that all cable clamps are tight.

9. After all the adjustments have been made, lower the tower.


! IMPORTANT: When the tower is lowered to install the wind turbine, undo only the pull-side cables. When adjusting the cables, NEVER loosen both sets of guy wires at the same time. When the tower is re-erected, only those pull-side cables will need to be readjusted.

INSTALLING THE AIR™ WIND TURBINE


Refer to your AIR™ Wind turbine Operator's Manual for assembly instructions.

Helpful Tips:

- Use the box that your AIR™ wind turbine was packed in to support the tower when attaching the wind turbine.
- A strain relief installed at the top of the tower will help support the wires hanging inside the tower.

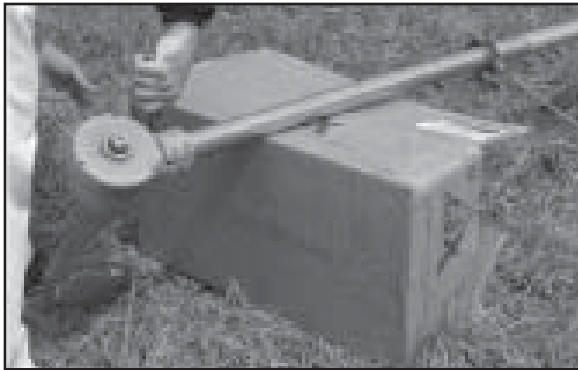

CAUTION: Proper grounding is very important to protect your AIR™ wind turbine from lightening and/or other transient voltages.

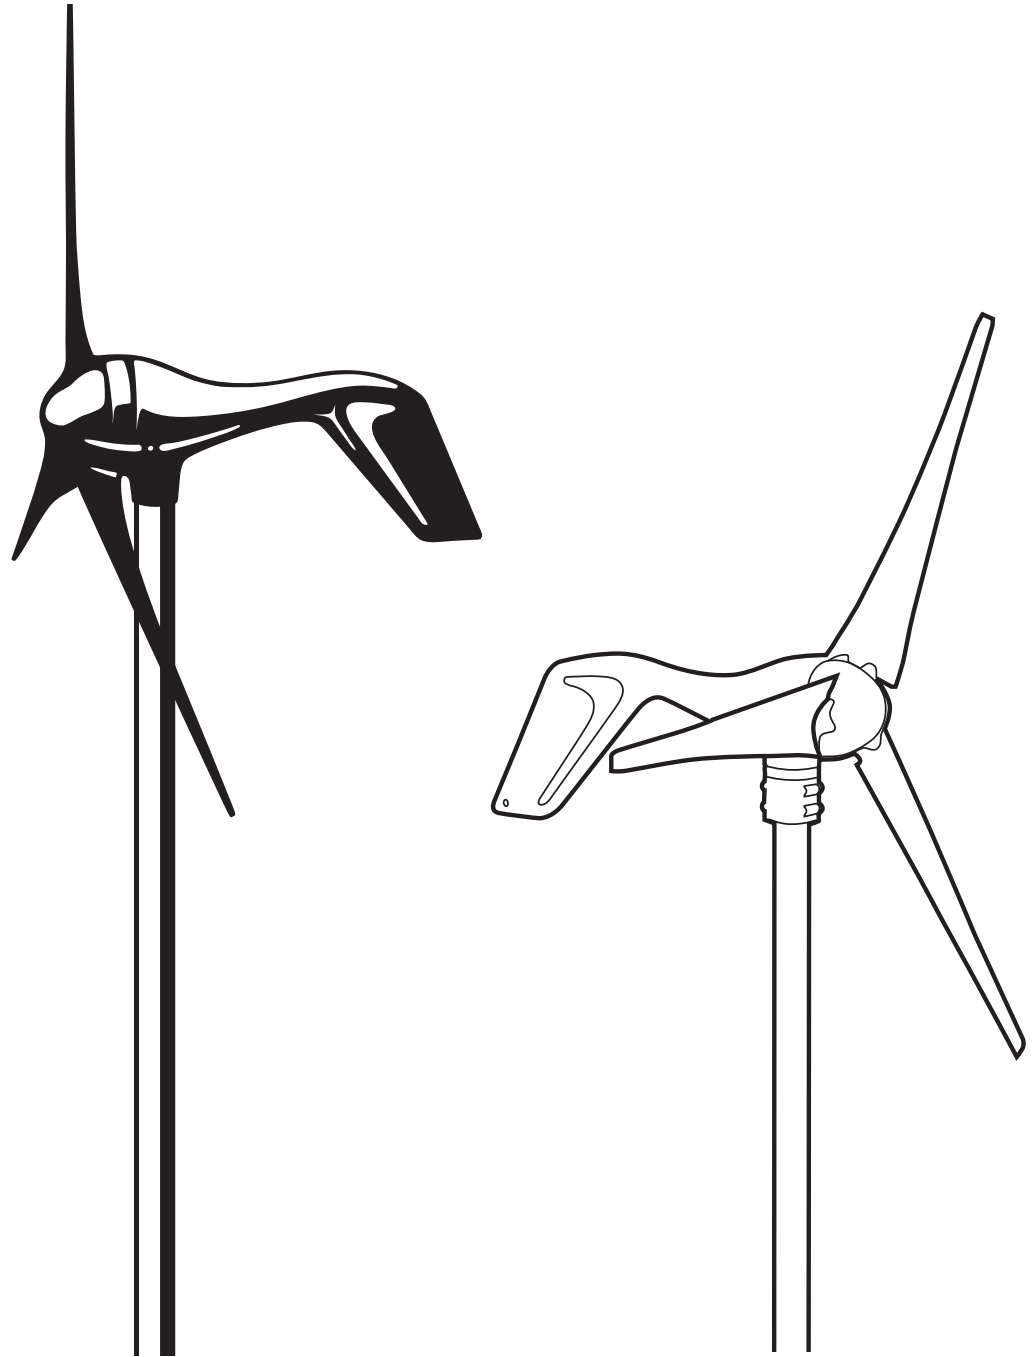

EZ TOWER™ MAINTENANCE

There are no moving parts in the tower, so maintenance is minimal. However, as part of your annual maintenance, Primus Wind Power, Inc. recommends that several areas are inspected to ensure long term integrity of your EZ Tower™.

- Check guy wire condition. Inspect for wear and fraying at the guy wire to earth anchor connection points.
- Check guy wire tension. Guy wires should have uniform tension. Wires should be free of slack, but not overly taut.
- Check all bolts for tightness.
- Check cable clamps and pivot bolt.
- Check any unusual noises or vibrations. Investigate and correct as necessary.



EZ Tower™

Primus Wind Power, Inc.
938 Quail Street
Lakewood, CO 80215 USA

Phone: (303) 242-5820

www.primuswindpower.com